


# Item No. : SPE212HX

## Installation guide

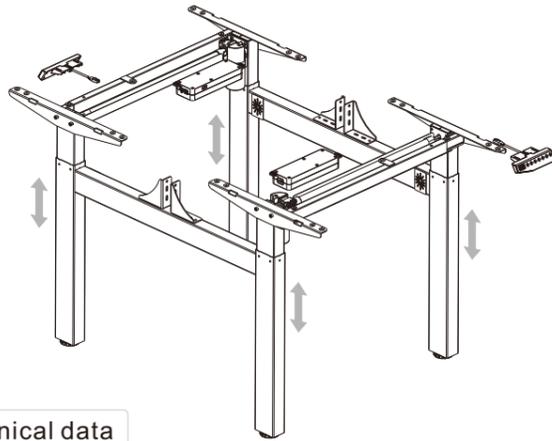

### Accessory list

Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.


No.	Image	Spec	Qty
A		Wrench 5x5mm	1
B		Wrench 2.5x2.5mm	1
C		ST4.8x16mm	10
D		M4X6mm	4
E		M8x16mm	8
F		M8x50mm	8
G		M6x16mm	16
H		ST4.2x20mm	28

### Technical data

Column QTY	2	Input Voltage	100-240V
Max Loading Capacity	70KG	Max Speed	25mm/s
Height Range	690-1190mm	Temperature	0-40°C
Length Range	830-1200mm		
Frequency	continuous operation for 2 mins at most after pause for 18 mins		

### Component list



No.	Part	Qty	No.	Part	Qty
①	Left Lifting Column	2	②	Right Lifting Column	2
No.	Part	Qty	No.	Part	Qty
③	Connecting beam	2	④	Cover	4
No.	Part	Qty	No.	Part	Qty
⑤	Supporting beam	2	⑥	Supporting plate	4
No.	Part	Qty	No.	Part	Qty
⑦	Transmission rod	2	⑧	Baffle	2
No.	Part	Qty	No.	Part	Qty
⑨	Control box	2	⑩	Handswitch	2
No.	Part	Qty	No.	Part	Qty
⑪	Power cable	2	⑫	Screen fixing base	4
No.	Part	Qty	No.	Part	Qty
⑬	Ratchet wrench	1	⑭	Wrench	1

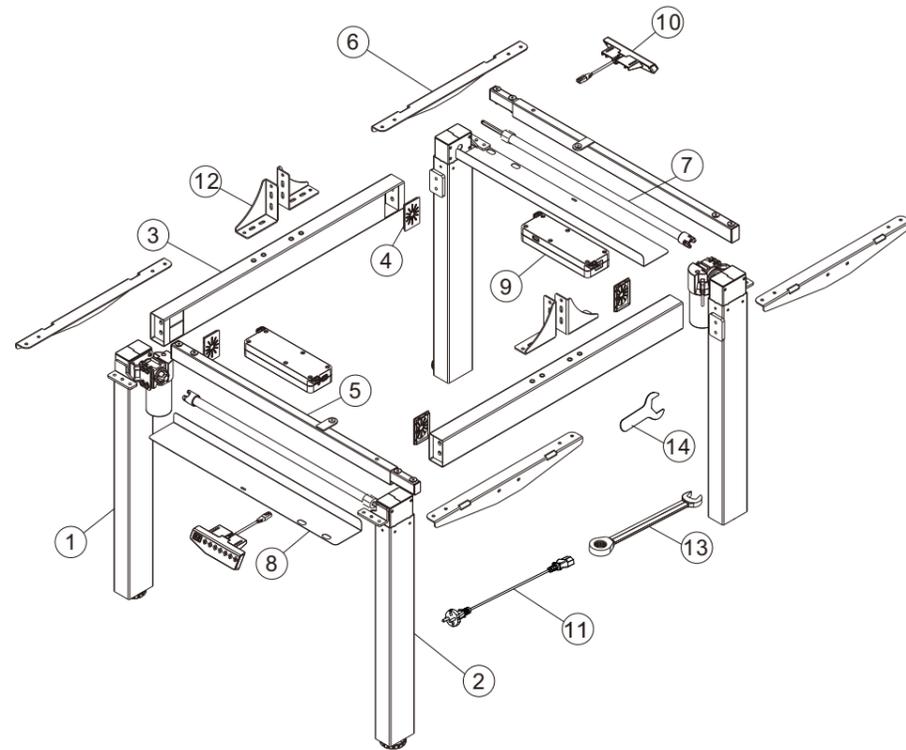



### Step 1



Install connecting beam(3), use ratchet wrench(13) to tighten.

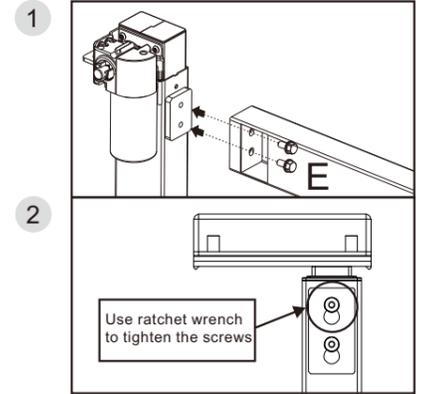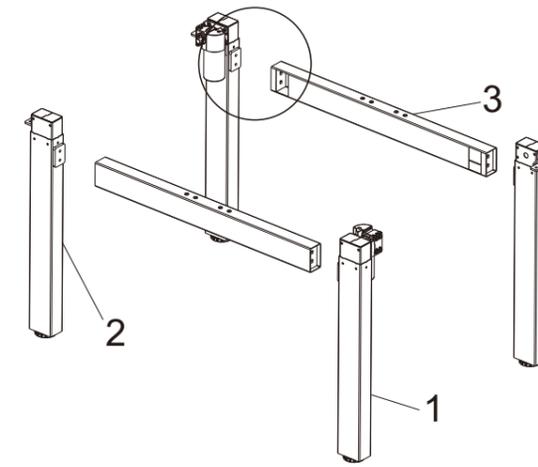

### Step 2

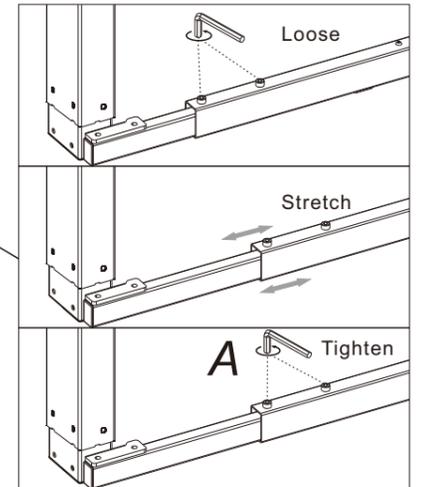
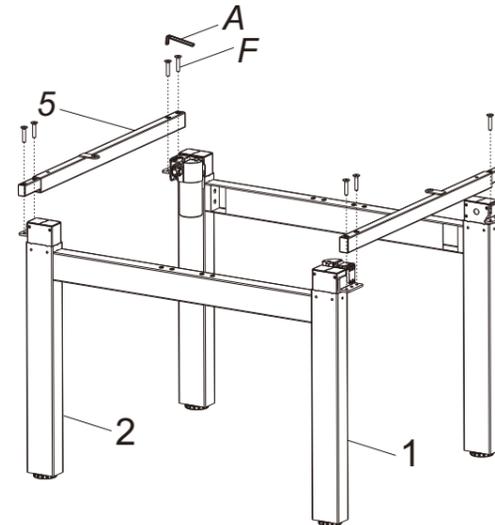


Install supporting beam(5), use 5\*5 wrench(A) to tighten the screws(F).


### Step 3



Way 1

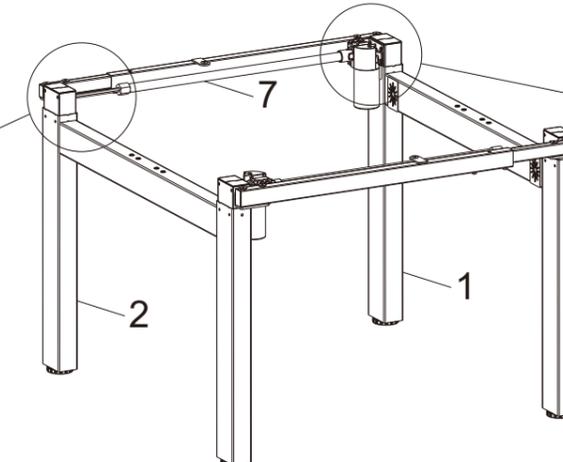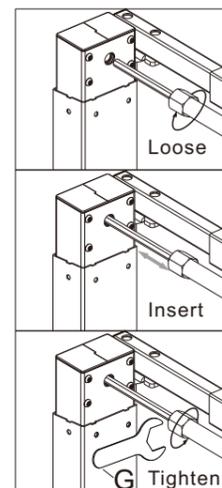


Way 2

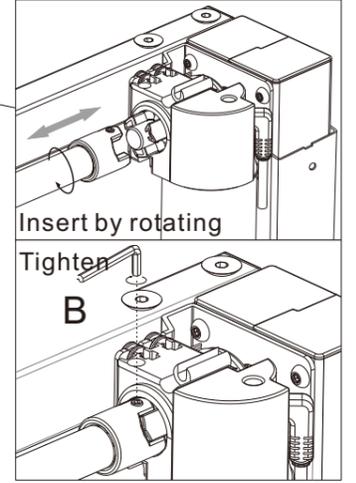

Connect transmission rod(7) with column (1)&(2), first according to way 1, then way 2, meanwhile use 2.5x2.5 wrench (B) to tighten.

### Step 4


Install supporting plate(6)

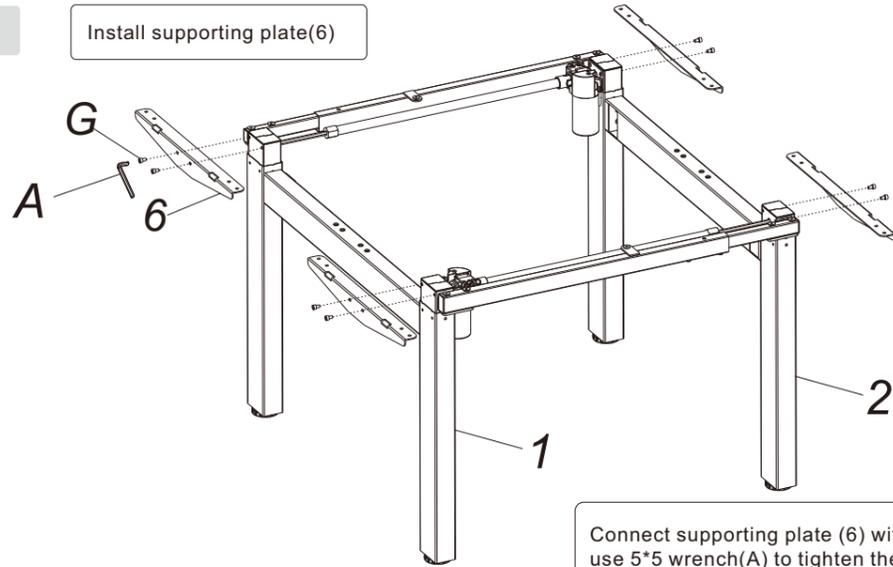

Connect supporting plate (6) with column(1)&(2), use 5\*5 wrench(A) to tighten the screws(G).


### Step 5

Install desktop and baffle

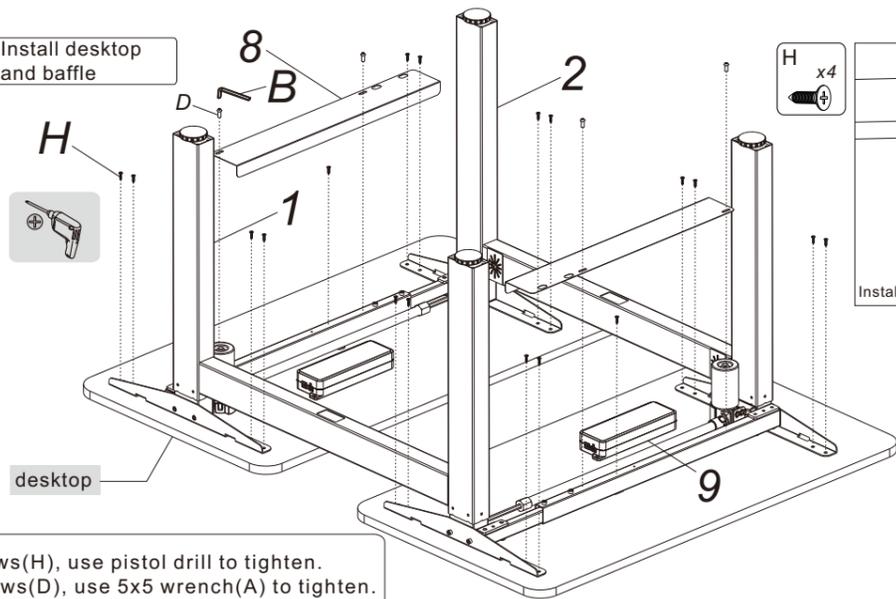



Connect desktop by screws(H), use pistol drill to tighten. Connect baffle(8) by screws(D), use 5x5 wrench(A) to tighten.

Install control box

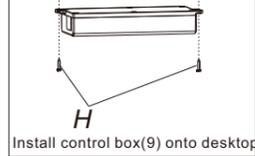


### Step 6

 Install screen

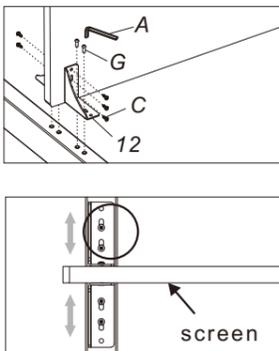


Adjust place of screen fixing base (12) according to the thickness of screen, use 5x5 wrench(A) to tighten the screws(G).

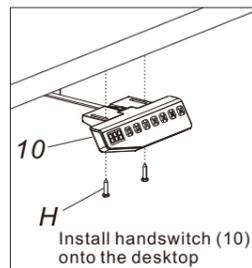

### How to use handswitch

 Button



●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards
●	“1”	Position 1, first height position saved by user
●	“2”	Position 2, second height position saved by user
●	“3”	Position 3, third height position saved by user
●	“M”	Memory button for height memory function
●	“A”	Alarm button for reminding of keeping same position for long time

### Instruction

- Press the UP button or DOWN button to lift or lower the height of desk surface. The LED display shows the real time value. The range of the height value: 69.0cm-119.0cm.
- Saving A Height Position
  - Press the UP button or DOWN button to lift or lower the height of desk surface. For instance, you adjust the height to 80cm.
  - Press "M" SAVE button and the LED display shows "5-", then press "1" to save the 1st height position to 80cm. The LED display shows "5-1".
  - Repeat step a and step b to save the 2nd height position to 117cm The LED display shows "5-2". Save the 3rd height position to 116cm The LED display shows "5-3".
  - Press "1", "2", "3", to automatically reach the height saved before.

- Long-Time Sitting Reminder
  - Press REMINDER button "A" to activate the function. The LED display shows "00".
  - Two seconds later, press the "▲" or "▼" button to adjust the reminder time only when the display screen flashes. Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, the buzzer will be active with a 10-second "DiDi...DiDi...DiDi..." tone.
  - Within the 10-second reminder buzz, press any button to reactivate the time countdown that is set up in (b) step. If no operation during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. No operation during the second buzz will turn off the Long-Time Sitting Reminder.
  - Press and hold the "A" button for three seconds to turn off the Long-Time Sitting Reminder. The LED display shows "off".
- Troubleshooting
  - Reset: When the LED shows "5fr", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
  - When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
  - If the "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button to start the reset process when it shows the "5fr".
  - If all these above process are inefficient, plz contact our customer service.

### Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 100kg; 2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1. Reposition 2. Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 100kg; 2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 100kg; 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power; 2. Contact your supplier or dealer;
Not enough up&down height	1. Press "M" and "3" together for 3 seconds or more, after hearing continuous beeping for twice, it will restore factory settings 2. Contact your supplier or dealer



### Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.

### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

We confirm that the technical construction of manufacturing, inspection and testing processes for above mentioned product are comply with the essential requirements of the European Directives 2014/30/UE (EMC), 2011/65/UE (ROHS) and 2014/35/EU (LVD) based on the mentioned above following harmonized test standards.

Produced in ChRL for:  
**DMTrade Mikołaj Tomaszewski** Wiśniowa 36; 64-000 Kościan, Poland  
 NIP: PL 6981681757  
 sklep@dmtrade.pl  
 Tel.: +48 661082052 / +48 785082052