


Model: SPE-O112BB

Installation guide

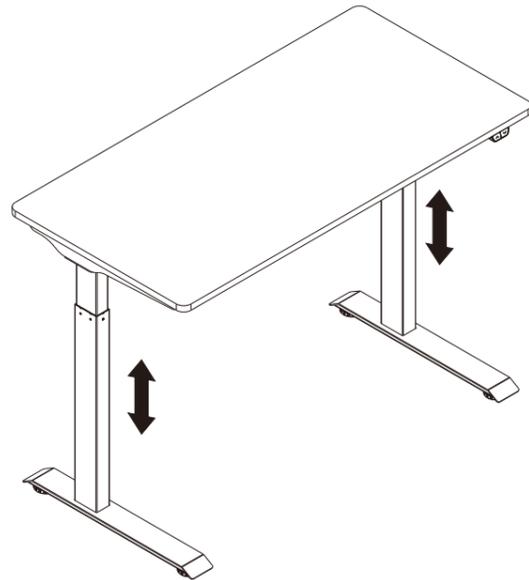


Technical Data

Column Number	2
Maximum Load	50KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	730mm
Highest Position	1230mm
Desktop Size	1200mm(length) 600mm(width)
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

Accessory List


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.

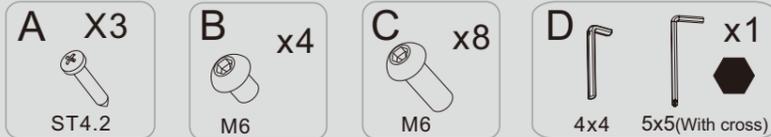

Part List

No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Tabletop	1	②	Lifting column	1	③	Right Column	1
④	Feet	2	⑤	Power plug	1	⑥	Adaptor	1
⑦	Cable mounts	4						

Installation Instruction


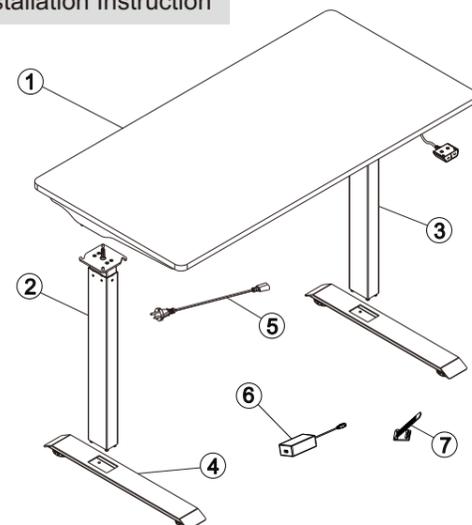


STEP1


Install the lifting column




Rotate the column after inserting it to the bottom to avoid height difference

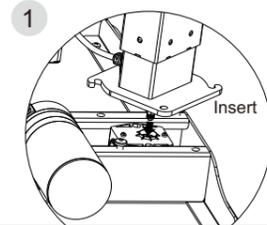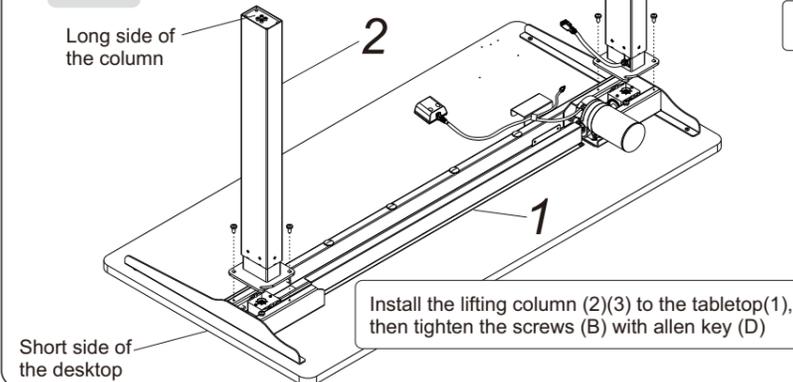


Insert the hexagon of the column head along the guide groove

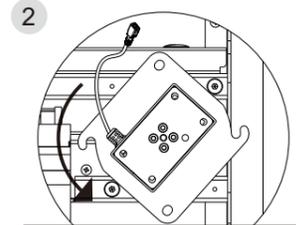

Rotate the column after inserting it, making the screws on the supporting beam into the column slot

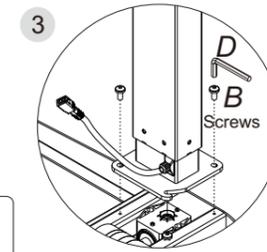


Tighten the screws (B) with 4\*4 allen key

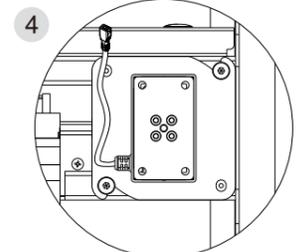

STEP2



Install the feet

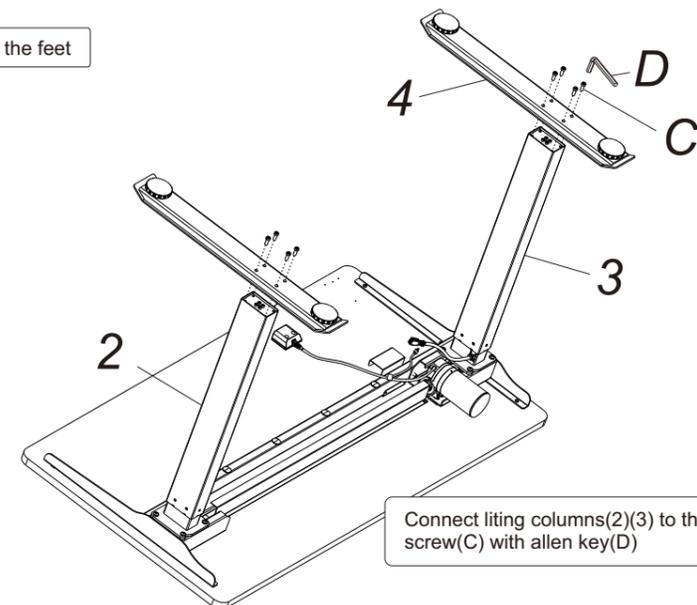

Connect lifting columns(2)(3) to the feet, tighten screw(C) with allen key(D)

STEP3

 
Install the hand switch

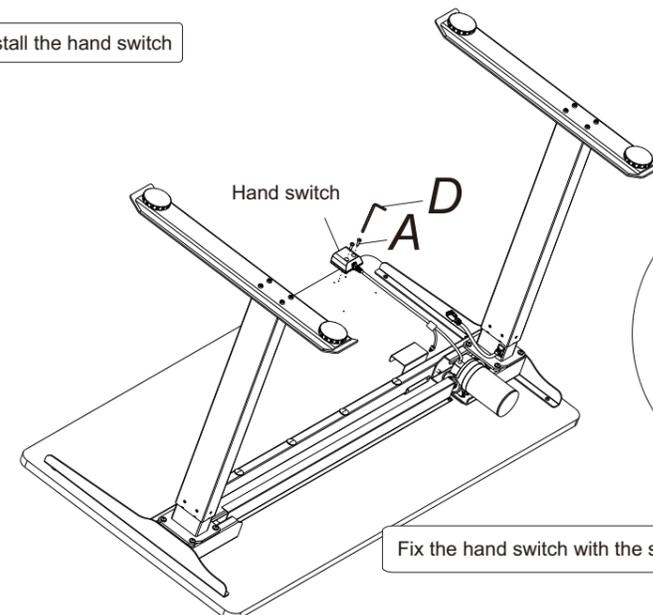


Fix the hand switch with the screw (A) and tighten it with 5\*5 wrench (D)

## STEP 4

Connect all cables to the adaptor

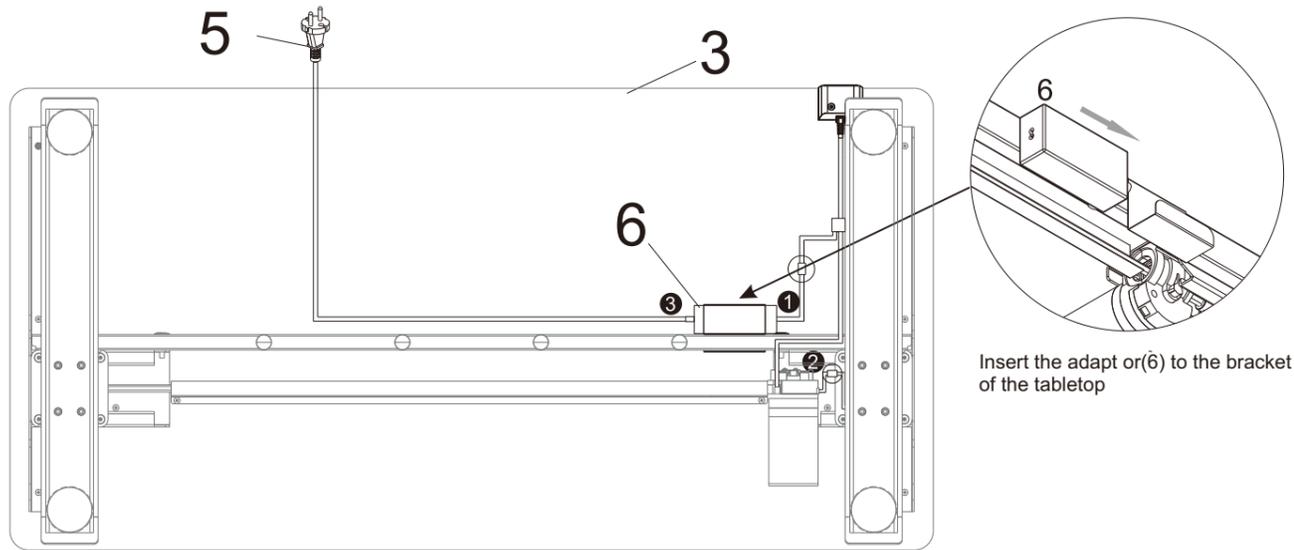

Insert the adaptor (6) to the bracket of the tabletop

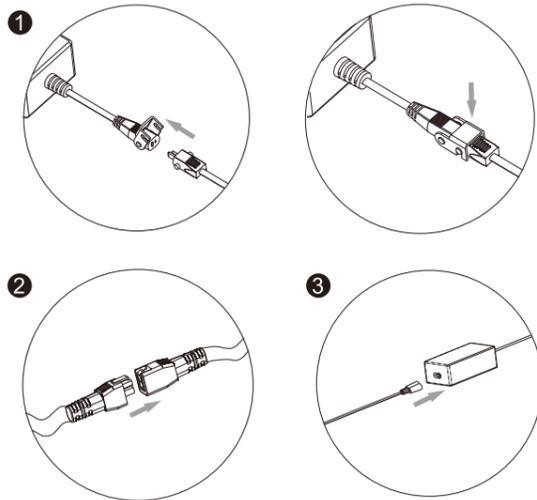

Fix the cables to the tabletop with cable management (7) to keep desk clean



Made in ChRL for  
**DMTrade Mikołaj Tomaszewski**  
 Wiśniowa 36, 64-000 Kościan, Poland

NIP: PL6981681757  
 email: sklep@dmtrade.pl  
 phone #1: +48 661 082 052  
 phone #2: +48 726 082 052

[www.ergoline.spacetronek.eu](http://www.ergoline.spacetronek.eu)

### How to use handswitch

- “▲” Adjust the desk upwards
- “▼” Adjust the desk downwards

### Instruction

Press the UP button or DOWN button to lift or lower the height of desk surface.

### Common fault treatment


The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well 2. Contact your supplier or dealer
The desktop could not be lifted	1. Check if overloaded, max loading: 50kg 2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/30min OFF)	1. Restart it after suspend for 30mins for the working time is too long 2. Contact your supplier or dealer

Button

UP button

DOWN button

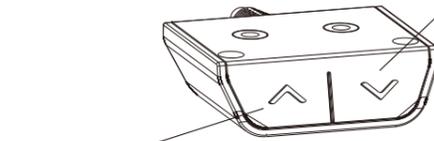

Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40°C
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
11. Keep the original package of the equipment if necessary in case of the future use in transportation.
12. The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

### Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.