



# User Manual

---

UNIVERSE PRO 3

Ref. 5600



No part of this manual may be copied, reproduced, transmitted, transcribed or translated into any language without permission.

Unitron reserves the right to change the specifications of the hardware and software described in these manuals at any time.

Unitron cannot be held liable for any damages resulting from the use of this product. Specifications are subject to change without notice. 11/16

© Unitron - Frankrijklaan 27 - B-8970 Poperinge - Belgium

**T** +32 57 33 33 63 **F** +32 57 33 45 24

**email** [sales@unitrongroup.com](mailto:sales@unitrongroup.com)

[www.unitrongroup.com](http://www.unitrongroup.com)

# CONTENTS

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1 Product description .....	4
1.2 Package contents .....	4
1.3 Safety Instructions.....	5
<b>2. INSTALLATION OF THE HARDWARE.....</b>	<b>6</b>
2.1 Module overview .....	6
2.2 Typical installation .....	7
<b>3. CONFIGURATION OF THE MODULE .....</b>	<b>9</b>
3.1 Minimal system requirements.....	9
3.2 Starting up the module.....	9
3.2.1 Device Information.....	12
3.2.2 Device Configuration .....	12
<i>Preferences.....</i>	12
<i>Login .....</i>	12
<i>Network .....</i>	13
<i>Firmware Update .....</i>	14
<i>Factory Reset.....</i>	14
<i>Reboot .....</i>	14
3.2.3 Input Settings .....	15
<i>LNB / Multiswitch.....</i>	15
<i>Single Cable (EN 50494) and (EN 50607) .....</i>	16
<i>DC for Pre-amplifier .....</i>	16
3.2.4 CAM .....	19
<i>CAM Configuration.....</i>	19
<i>CAM Menu .....</i>	20
3.2.5 Output Settings .....	21
<i>IP.....</i>	21
<i>RF .....</i>	24
3.3 Import and export settings .....	28
<b>4. TECHNICAL SPECIFICATIONS .....</b>	<b>29</b>
<b>5. CONDITIONS OF WARRANTY .....</b>	<b>30</b>
<b>6. APPENDIX.....</b>	<b>31</b>
6.1 VHF Frequency table .....	31
6.2 UHF Frequency table .....	32
6.3 Power Conversion Table.....	33

# 1. INTRODUCTION

## 1.1 Product description

- Receives 3 transponders from any DVB source (satellite, terrestrial or cable)
- Decrypts the PayTV channels, when one or more professional CAMs are inserted
- Puts the demodulated transponders on your private coaxial and IP network
- Can work standalone to insert channels in your existing network
- Compatible with SD and HD, with MPEG2 and MPEG4
- Supports LCN
- Perfect picture quality thanks to a MER, comparable to premium headend equipment
- Plug&Play thanks to a built-in WebGUI

## 1.2 Package contents

- 1 Universe PRO 3 (ref. 5600)
- 1 mains cable
- 3 Ethernet cables
- 1 75 Ohm termination for the Bypass input (in case not used)

## 1.3 Safety Instructions



**Read these instructions carefully before connecting the unit**



To prevent fire, short circuit or shock hazard:

- Do not expose the unit to rain or moisture.
- Install the unit in a dry location without infiltration or condensation of water.
- Do not expose it to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- If any liquid should accidentally fall into the cabinet, disconnect the power plug.



To avoid any risk of overheating:

- Install the unit in a well aired location and keep a minimum distance of 15 cm around the apparatus for sufficient ventilation
- Do not place any items such as newspapers, tablecloths, curtains, on the unit that might cover the ventilation holes.
- Do not place any naked flame sources, such as lighted candles, on the apparatus
- Do not install the product in a dusty place
- Use the apparatus only in moderate climates (not in tropical climates)
- Respect the minimum and maximum temperature specifications



To avoid any risk of electrical shocks:

- Connect apparatus only to socket with protective earth connection.
- The mains plug shall remain readily operable
- Pull out power plug to make the different connections of cables
- To avoid electrical shock, do not open the housing of adapter.



**Maintenance**



Only use a dry soft cloth to clean the cabinet.



Do not use solvent




For repairing and service refer to qualified personnel.



**Dispose according your local authority's recycling processes**

## 2. INSTALLATION OF THE HARDWARE

### 2.1 Module overview

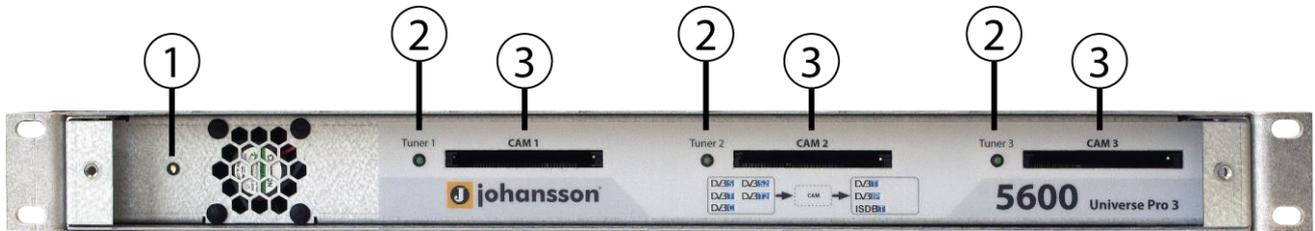


**Figure 3: Unscrew the front panel to get access to three CAM interfaces.**

N° 1: Power indicator

N° 2: Tuner lock / unlock + blinking when WebGUI connected

N° 3: CAM interface slots

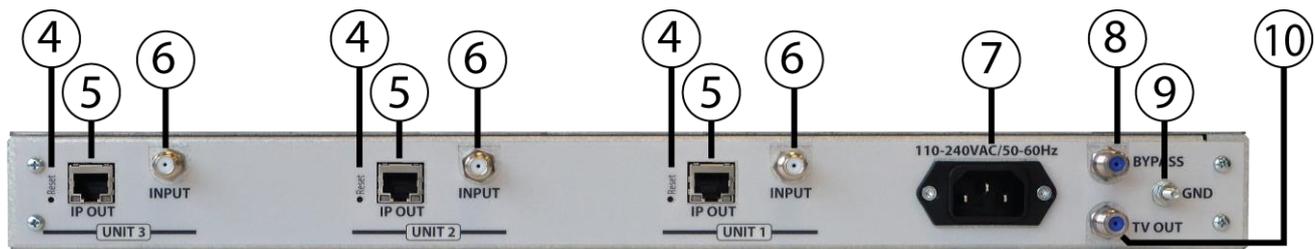

**Figure 4: Back panel connections.**

N° 4: RESET button

N° 5: IP OUT

N° 6: UNIVERSAL INPUT: DVB-S/S2, DVB-T/T2, DVB-C

N° 7: Mains input 100-240 VAC, 50/60 Hz

N° 8: BYPASS: to insert a network of existing TV channels (should be blocked with a 75Ω DC-blocked resistor when not used)


N° 9: Grounding

N° 10: TV OUT: 3 DVB-T or ISDB-T Multiplexes (non adjacent possible)

For typical applications, see figure 1 and 2 on page 7 and 8.

## 2.2 Typical installation

- Perfect when your TV installation does not have satellite tuners, but you wish to receive satellite TV.
- Perfect when your TV installation does not support DVB-T2 tuners, but you wish to receive the newest DVB-T2 signals.
- In existing installation where you want to add a few extra channels from different sources.
- New installations, where you can use one or multiple Universes PRO 3 to setup a complete network of TV and radio channels. See figures 1 and 2.
- In some countries, the operator does not support CAMs with business-to-business (B2B) subscriptions. However, if that operator allows professional installations, you can use multiple Universes PRO 3 with business-to-consumer (B2C) subscriptions without driving the costs too high.

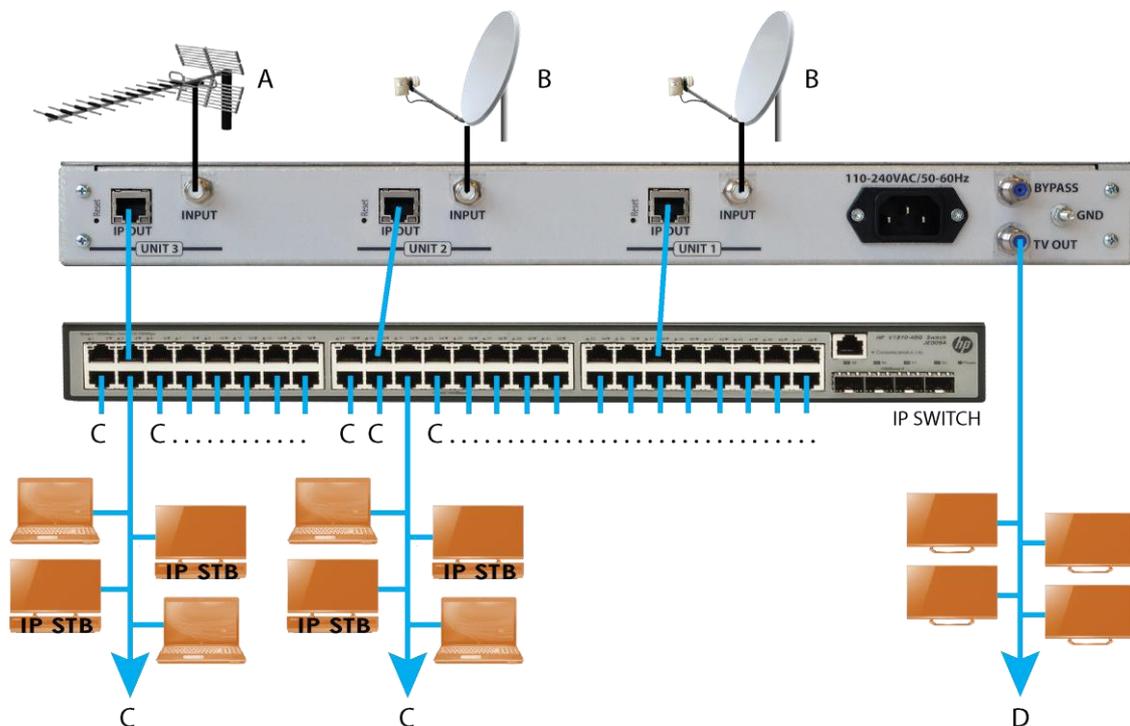


**FIGURE 1: DVB-T AND DVB-S2 CONVERTED TO DVB-T AND IP CHANNELS**

A: terrestrial antenna

B: satellite dishes

C: infinite IP clients (IP STBs, Computers or mobile devices with VLC, ...)

D: infinite DVB-T clients (DVB-T STBs, TV, ...)

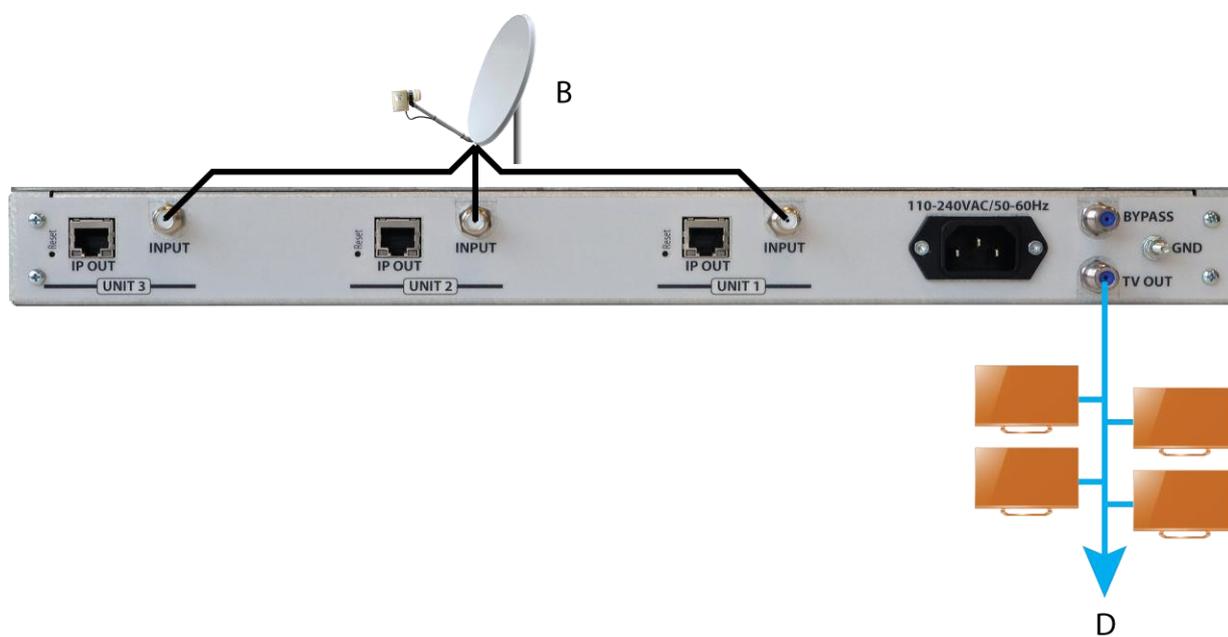

**FIGURE 2: DVB-S2 CONVERTED TO DVB-T**

B: satellite dish

D: infinite DVB-T clients

## 3. CONFIGURATION OF THE MODULE

### 3.1 Minimal system requirements

The WebGUI is supported by the following web browsers (and newer versions of these browsers):

- Chrome 4
- Safari 3.1
- Firefox 3.6
- Explorer 9
- Opera 10.6

When using a different browser, we cannot guarantee a correct functioning of the interface.


### 3.2 Starting up the module

Connect all cables needed for your installation. (See page 6 Installation of the Hardware.) The Universe PRO 3 has 3 different units, 1 for each tuner. Default, they have the following settings:

- Unit 1 or Tuner 1
  - IP address = 192.168.50.50
  - Hostname = start1
  - MUX frequency = 618MHz
- Unit 2 or Tuner 2
  - IP address = 192.168.50.51
  - Hostname = start2
  - MUX frequency = 626MHz
- Unit 3 or Tuner 3
  - IP address = 192.168.50.52
  - Hostname = start3
  - MUX frequency = 634MHz

For the first set-up, it is advised to connect the Ethernet cable (RJ45) directly to your PC (or by using a switch without DHCP to connect all 3 RJ45s to your PC).

- After powering the Universe PRO 3, wait until the power led turns on (this can take up to about 2 minutes). Once the power led is green, the 3 units can be accessed through the WebGUI with the default IP addresses shown above. As the IP addresses are static in the

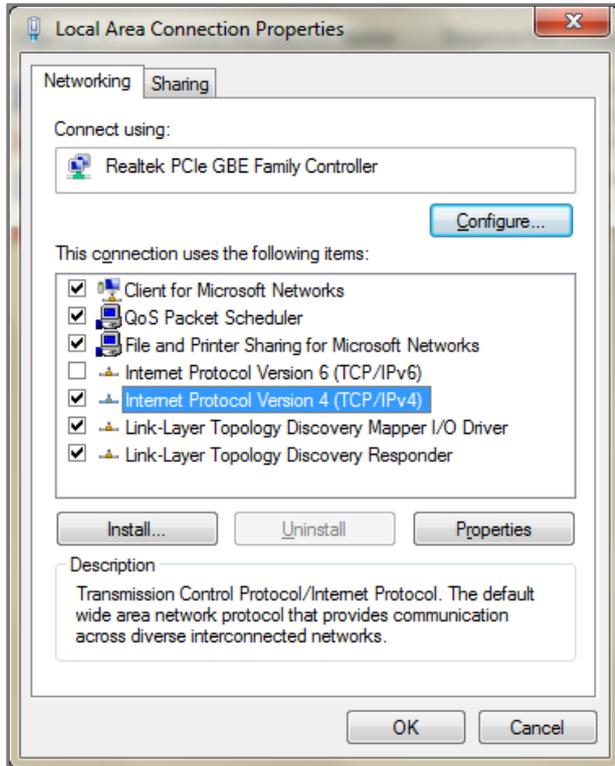

192.168.50.5x range, you will need to set-up a static IP address in your PC that matches the subnet of the device. For example 192.168.50.25.

#### Windows 7


Go to start → Control Panel → Network and Internet → Network and Sharing Center → Change Adapter Settings. Right-click on "Local Area Connection" and then on "Properties".

#### Windows 8

Open the windows 8 start screen by pressing the start button. Type "Control Panel" and press enter. Then go to "Network and Internet" → "Network and Sharing Center" → "Change Adapter Settings". Right-click on "Local Area Connection" and then on "Properties".

Double click on "Internet Protocol Version 4 (TCP/IPv4)" to enter the IP settings of your

adaptor.

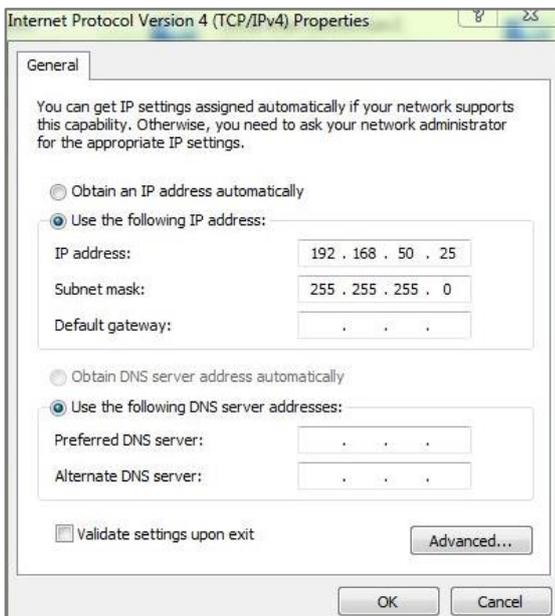


Check the radio button "Use the following IP address" and enter an IP and subnet mask.

You can leave the Default gateway and DNS settings empty.

Open your browser and surf to the website <http://192.168.50.50> for the first unit. The other units are accessed through <http://192.168.50.51> and <http://192.168.50.52>. The front LED (see n° 1 on page 6) of the unit you are accessing, will blink.

If everything went fine you will see the following webpage, if not check your network settings and try again.

Alternatively, the webpage can also be accessed via <http://startx.local> but also in this case your PC needs to be in the same subnet. The x in "startx" indicates the unit number you want to access. F.i. for unit 3 you need to type in <http://start3.local>.

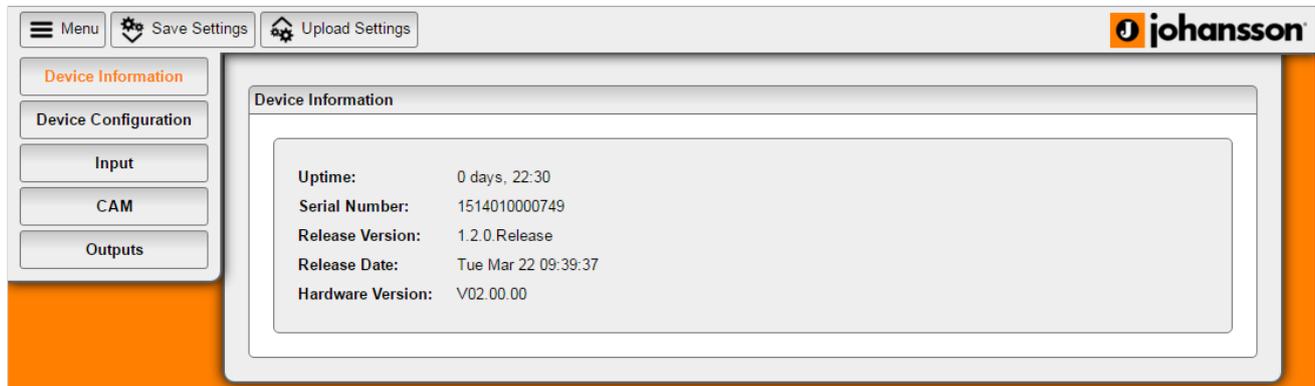

After you have changed the IP address of your device (see page 13) you can unplug the direct cable and add the device to your installation (where a DHCP server determines dynamically the IP addresses instead of using static IP addresses. Do not forget to change the IP settings of your PC back to its previous settings (probably "Obtain an IP address dynamically").

### Resetting the device

Reboot the device by shortly pressing the reset button 1 second. When the button is released, the power led will turn off until the device is rebooted.

Reset the device to factory default settings by pressing the reset button for more than 10 seconds. When the button is released, the power led will turn off until the reset is done. The device will be restored to factory default settings and the IP of the device will be changed to 192.168.50.50. You can also reset the device in the WebGUI (See p. 14).

As the Universe PRO 3 contains 3 units, you will need to reset all 3 individually (can be done simultaneously).

Important remark: after reset, the unit returns to the IP Address 192.168.50.50 and hostname "start" which is not equal to the settings when coming out of the factory (see page 9).

### 3.2.1 Device Information

The screenshot shows a window titled "Device Information" with the following data:

<b>Uptime:</b>	0 days, 22:32
<b>Serial Number:</b>	1514010000749
<b>Release Version:</b>	1.2.0.Release
<b>Release Date:</b>	Tue Mar 22 09:39:37
<b>Hardware Version:</b>	V02.00.00

Device Information gives some basic information about the each individual unit. Here you can find the uptime, the serial number, firmware version, the release date of the firmware and the hardware version. This is useful for checking if your device is up-to-date.

### 3.2.2 Device Configuration

As the Universe PRO 3 contains 3 units (1 per tuner), the configuration has to be done for each unit.

#### Preferences

The screenshot shows a window titled "Device Preferences" with the following configuration options:

**Level Unit:**  dBm  dB $\mu$ V

Here you can choose between dBm and dB $\mu$ V as your default level unit.

#### Login

The screenshot shows a login configuration window with the following options:

Enable password protection

**Username:**

**Password:**

**Confirm Password:**

Here you can set up a user and password to secure the WebGUI. After pressing the "Apply" button you will be asked to reboot the device. Press "OK" to confirm the reboot.

The next time you want to access the configuration pages you will be asked to login. The device information page remains accessible without authenticating.

If you have forgotten your password you will need to reset the Universe PRO 3 to its default settings by pressing the reset button (see p. 11).

## Network

Go to "Device Configuration" → "Network" to change your network settings. After changing the IP settings you will need to reconnect to the new IP.


You can choose to obtain an IP address automatically. This requires a DHCP server, which is available on most home and professional IP networks. You can find the IP address of your device in the DHCP client list of your DHCP server.

Alternatively, you can keep the Universe PRO 3 in static IP 192.168.50.5x or any other address of your choice.


→ **Remark:** The "Apply" button starts blinking if you change the settings of the Universe PRO 3 so you will not forget to press it.

Default the Universe PRO 3 webpages can also be accessed via <http://startx.local> ("x" is marking the unit number: 1, 2 or 3). In this example, the hostname was changed to 5600-1, which means the webpage can now be found on <http://5600-1.local>.

## Firmware Update

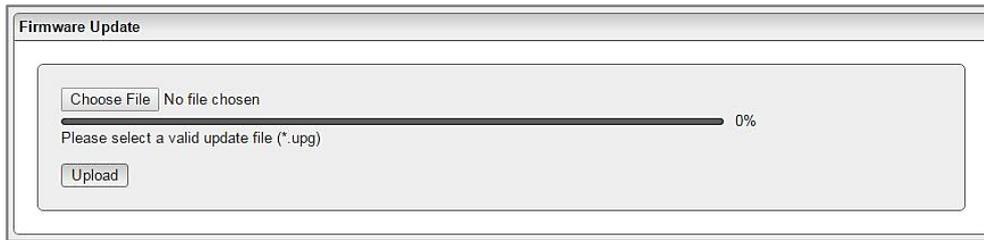


If you want to update the firmware, click on "Choose File" and select the update file. The firmware file ends with the \*.upg extension. Then click the "Upload" button and wait until the file is uploaded and the device is rebooted (this can take a while).

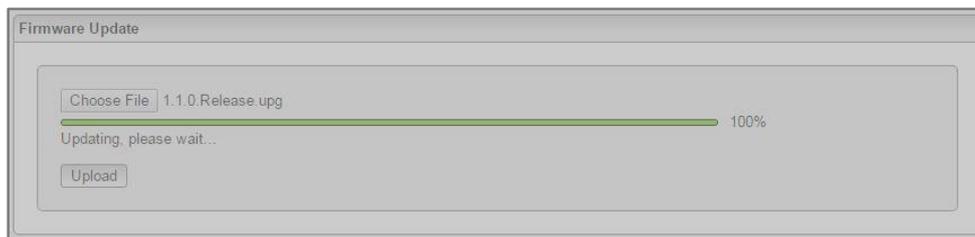

## Factory Reset

To reset the Universe PRO 3 to its factory default settings click on "Factory Reset" and confirm with "OK". You can also reset the Universe PRO 3 by pressing the reset button for 10 seconds (see p. 11).

Repeat this step for the other 2 modules if you want to reset the complete Universe PRO 3.

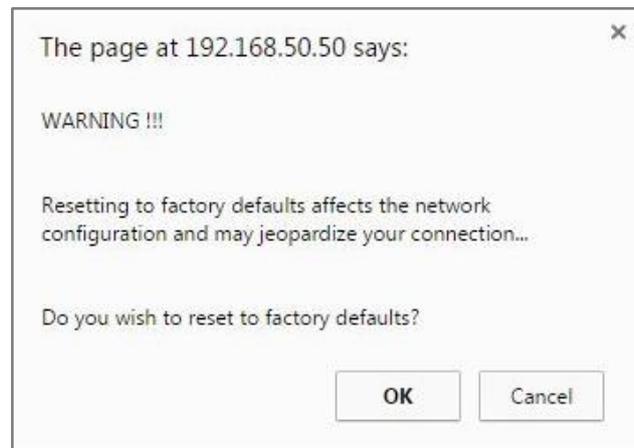

## Reboot

Click on "Reboot" to restart your device. This is useful when you don't have physical access to the Universe PRO 3 and you need to restart the device.

Remark : all the configurations, settings, reset and reboot have to be performed for each of the 3 units individually. This can be done in parallel.

### 3.2.3 Input Settings

**LNA/LNB Configuration**

Mode:  LNB Type:

The LNB / Multiswitch is being controlled by another device

Polarisation / Voltage:  Sat.:

Power:

Choose the mode you want to use and if required the type of LNB. The following settings depends on the Mode and LNB used. If you select the Universal or C-Band LNB the LO Frequency and Band / Tone settings will not be shown because those settings are filled in automatically.

#### LNB / Multiswitch

Choose this mode if you are using a regular LNB or a multiswitch.

LO Frequency (kHz) \*\*:

The LNB / Multiswitch is being controlled by another device

Polarisation / Voltage:  Band / Tone:  Sat.:

\*\* LO frequency should be set to 0 when intermediate frequencies (IF) are used for tuning...

- LO Frequency (kHz): The LO Frequency used in the LNB. Set this to 0 when intermediate frequencies (IF from 950 to 2150MHz) are used for tuning. This setting will be filled in automatically when choosing the Universal or C-Band LNB type. *(only available if LNB type is manual)*
- The LNB / Multiswitch is being controlled by another device: Enable this setting if you are using another device to control and power the LNB or multiswitch e.g. another Universe PRO 3.
- Polarisation / Voltage: The polarisation or voltage you want to use.
- Band / Tone: The band / tone you want to use. *(only available if LNB type is manual)*
- Sat.: The satellite (A, B, C, D) used.
- Apply: Save your current settings!

## Single Cable (EN 50494) and (EN 50607)

LO Frequency (kHz) **: <input type="text" value="0"/>				
User Band (UB)	UB Frequency (kHz)	Polarisation / Voltage	Band / Tone	Sat.
<input type="text" value="0"/>	<input type="text" value="1280000"/>	<input type="text" value="Horizontal / Right / 18V"/>	<input type="text" value="High / 22kHz"/>	<input type="text" value="A"/>
<input type="button" value="Apply"/>				

\*\* LO frequency should be set to 0 when intermediate frequencies (IF) are used for tuning...

- LO Frequency (kHz): The LO Frequency used in the LNB. Set this to 0 when intermediate frequencies (IF) are used for tuning. This setting will be filled in automatically when choosing the Universal or C-Band LNB type. *(only available if LNB type is manual)*
- User Band (UB)\*: The user band the Universe PRO 3 should receive.
- UB Frequency (kHz)\*: The user band frequency the Universe PRO 3 should receive.
- Polarisation / Voltage: The polarisation or voltage you want to use.
- Band / Tone: The band / tone you want to use. *(only available if LNB type is manual)*
- Sat.: The satellite (A, B, C, D) used.
- Apply: Save your current settings!

\*: You can find the desired User Band and User Band frequency in the manual of your SCR LNB or multiswitch.

## DC for Pre-amplifier

<input type="checkbox"/> The terrestrial amp. is being powered from another device (disable power)
<b>Voltage</b>
<input type="text" value="12V"/>
<input type="button" value="Apply"/>

- The pre-amplifier is being powered from another device (disable power): Enable this option if you use another device to power the pre-amplifier.
- Voltage: Choose the desired voltage 12V or 24V.
- Apply: Save your current settings!

The LNA/LNB is now powered and configured. Next, we will configure the tuner.

**Tuner Configuration**

Type: DVB-S(2) ▼

Frequency (kHz)    Symbol Rate (kBaud)

12721750    23500

Apply

Lock: ●

IF Frequency: 2121.75 MHz

Bitrate:  47 Mbps    SNR:  14 dB

Level:  -27 dBm    PER:  0 %

CAM Inserted: ●

Change your input type to the DVB source you are using. Select the frequency and symbol rate or bandwidth to match the transponder you want to receive and click on "Apply". To know the transponder go to <http://www.lyngsat.com> or <http://kingofsat.net>. If all settings are correct, the lock icon will turn green.

▼ Satpositiesatellite - Frequentie, Polarisatie - Transponder - Beam		Standaard	Modulation	Symbol Rate - FEC	Provider, Bitrate - Network ID			
Zap	Naam	Land	Category	Packages	Codering	SID	VPID	Audio
Collapse all frequencies								
19.2°E	Astra 1M	10714.25 H 49	Astra 1M	DVB-S2	QPSK	22000		
Occasional Feeds, data or inactive frequency								
19.2°E	Astra 1KR	10729.00 V 50	Astra 1KR	DVB-S2	8PSK	22000	3	ASTRA 1, 42.6 Mbps
ZAP	AXN Spain HD	Spain	Series	Canal+ (Astra)	Nagravision 3	30800	160	HD 80 esp 81 vo
ZAP	Canal+ Comedia HD	Spain	Movies	Canal+ (Astra)	Nagravision 3	30801	161	HD 80 esp 81 vo
ZAP	Canal+ Liga HD	Spain	Sport	Canal+ (Astra)	Nagravision 3	30802	162	HD 80 esp 81 vo

- Lock: ● Green symbol means the device is locked on the chosen transponder.
- Bitrate: The bitrate of the incoming signal.
- Level: The level of the incoming signal.
- SNR: Signal to Noise Ratio of the incoming signal.
- PER: Packet Error Rate of the incoming signal. This should be 0% otherwise the incoming signal quality is bad.
- CAM Inserted: ● Turns green if a CAM module is detected.

If the tuner is well configured and the lock icon is green, the list of channels should be available.

SID	Type	Name	Descramble
10030		CNBC Europe	<input type="checkbox"/>
10050		BBC World	<input type="checkbox"/>
10063		M6 BOUTIQUE LA CHAINE	<input type="checkbox"/>
10067		Bloomberg Europe TV	<input type="checkbox"/>
10079	 	RMC Decouverte	<input type="checkbox"/>
10080		Sonlife Broadcasting Network	<input type="checkbox"/>
10081	 	RMC Decouverte	<input type="checkbox"/>
10082		Algerie 3	<input type="checkbox"/>
10083		Canal Algerie	<input type="checkbox"/>
10099		Data System	<input type="checkbox"/>

Select the service(s) you want to run through the CAM Interface by checking the Descramble checkboxes. A grey lock means the service is encrypted. Confirm with the "Apply" button.

- SID: Service ID for listed service.
- Type:
  -  : HD-TV
  -  : SD-TV
  -  : Radio
  -  : Data
- Lock:  : Scrambled service  
No lock symbol: FTA service
- Name: Name of the service.
- Descramble: When selected, that service will go through the CAM.

## 3.2.4 CAM

### CAM Configuration

The screenshot shows a web interface for CAM configuration. It is titled "CAM Configuration". There are two main panels. The top panel contains a "Watchdog:" label with a dropdown menu set to "OFF" and an "Apply" button. The bottom panel contains "CAM Inserted:" and "CAM State:" labels, each with a green indicator light, and a "Reset CAM" button.

Watchdog: The CAM watchdog is OFF by default which is the advised position for most applications. But in some configurations, it can be useful to switch on the CAM watchdog, this CAM watchdog will monitor all scrambled services that are set to "descramble". A service that still has scrambled streams after the CAM is marked as problematic (and will have a red lock symbol on the output pages).

If at least one service is descrambled successfully, the CAM is considered healthy and will not be reset. If none of the scrambled services are descrambled anymore the CAM will be reset.

➔ **Remark**: There will be 3 attempts to reset the CAM, after those reset attempts the CAM will get some time to update the smartcard rights. If the CAM becomes healthy again, the watchdog will become fully active again.

CAM Inserted: Turns green if a CAM module is detected.

CAM State: Turns red if the CAM can't decrypt scrambled services.

## CAM Menu

**CAM Menu**

**Aston CAM** Smart card number

---

# 1 : [Subscription information]  
 # 2 : [Settings]  
 # 3 : [Information]

---

The CAM menu will open automatically in a few seconds, if it doesn't you can click the "(Re)open CAM Menu" button. To use the CAM menu click on the menu item you want to open or click on "Return" to go back 1 step in the menu.

*The CAM menu will be different if you use another CAM module and/or CAM card. For more information about the CAM menus refer to its specific manual.*

**Aston CAM**

---

# 1 : [Waiting for smart card, please wait]

---

If you get the message "Waiting for smart card, please wait" you will need to wait a few seconds and then click the "(Re)open CAM Menu" button or the "Waiting for smart card" message to refresh the menu.

## 3.2.5 Output Settings

### IP

There are 2 modes for the IP output : SPTS (default) and MPTS.

#### Mode : SPTS

This is the default mode and is used in IPTV solutions. In this mode, multiple SPTS streams are being streamed to client devices (PC, TV, STB, ...) who can independently select any of the video and/or audio channels.

Click on "Add Service" to add a service to an IP stream. You can keep adding services until the CPU hits 100%. But if the CPU usage exceeds 90% you can have performance issues, due to peaks in the services. If you want the Universe PRO 3 to decrypt the services, make sure the lock icon is green otherwise go back to input settings and descramble the service.

➔ **Remark:** The CPU also has to process the incoming signal. This typically takes 30% of the processor even when no output streams are active.

Do not forget to press the "Apply" button when all output settings are done.

**Output Configuration**

Mode: SPTS

CPU:  56%

Bitrate:  24 Mbps

SID	Type	Name	Dest. Address	Dest. Port	Enabled	Details
7020	 	RTL4 HD	<input type="text" value="239.201.0.5"/>	<input type="text" value="49152"/>	<input checked="" type="checkbox"/>	 
7030	 	VTM HD	<input type="text" value="239.201.0.2"/>	<input type="text" value="49152"/>	<input checked="" type="checkbox"/>	 
7054	 	SyFy	<input type="text" value="239.201.0.1"/>	<input type="text" value="49152"/>	<input checked="" type="checkbox"/>	 
7056	 	2BE HD	<input type="text" value="239.201.0.3"/>	<input type="text" value="49152"/>	<input checked="" type="checkbox"/>	 
7057	 	VIER HD	<input type="text" value="239.201.0.4"/>	<input type="text" value="49152"/>	<input checked="" type="checkbox"/>	 

--Add Service--
Download playlist: 

- SID: Service ID.
- Type:
  -  : HD-TV
  -  : SD-TV
  -  : Radio
  -  : Data

- Lock:  : Descrambled service
-  : Problematic service (still scrambled after running through the CAM)
-  : FTA service that runs through the CAM module
-  : Scrambled service not running through the CAM module
- No lock symbol: FTA service
- Name: Name of the service.
- Dest. Address: Destination address, the IP address the service will run on, needs to be in the 239.0.0.0-239.255.255.255 range.
- Dest. Port: Destination port, the port the service will run on.
- **! →** Make sure that no 2 service(s) have the same Destination address and Destination port, in that case only 1 service will be available.
- Enabled: Turns the service on or off. Can be used instead of the delete button if you are planning to use that service later.
- Delete button: Deletes the service from the list.
- Details: Show advanced settings about the service, see details below.
- Apply: Saves the current settings!

Click "Download playlist:  " to download a playlist for your streams. This playlist can be opened on your computer with VLC or can be imported in your IPTV set top box or middleware.

Click on "Details" to enter the advanced settings for that service. Here you can enable or disable the underlying streams. Do not forget to press the "Apply" button.

SID	Type	Name	Dest. Address	Dest. Port	Enabled	Details
12851	 	La Une HD	239.50.0.5	49152	<input checked="" type="checkbox"/>	 
	<b>PID</b>	<b>Type</b>	<b>Bitrate</b>	<b>Enabled</b>		
	551		5.587 Mbps	<input checked="" type="checkbox"/>		
	34		0.126 Mbps	<input checked="" type="checkbox"/>		
	101		0.202 Mbps	<input checked="" type="checkbox"/>		
	51		0.227 Mbps	<input checked="" type="checkbox"/>		

- PID: Package identifier for the listed stream.
- Type:  : Video
-  : Audio
-  : Data
- Bitrate: Bitrate of the stream.
- Enabled: Turns the selected stream on or off.

 
Mode : MPTS


This is a special mode and is mainly used for capturing or monitoring purposes. Basically this mode receives the DVB transponder and removes the RF part. The remaining digital transponder is entirely transmitted on the IP output. So there is no need to select services, all services are streaming. This is not used for IPTV solutions as some clients (STB, TV, ...) are not able to separate the different services. VLC however can still select the services.

**Output Configuration**

Mode:


Dest. Address	Dest. Port
<input type="text" value="239.0.0.1"/>	<input type="text" value="49152"/>

CPU:  32%

 Bitrate:  58 Mbps

Although this mode is mainly used for capturing and monitoring purposes, it can also be used 24/7 as a transport stream to transmit the entire DVB transponder over IP from point A to point B. This stream can then be received in point B by an Edge-QAM and rebroadcasted over DVB-C on a second local network.

The disadvantages of this mode is that some features are deactivated. See the screenshot below.

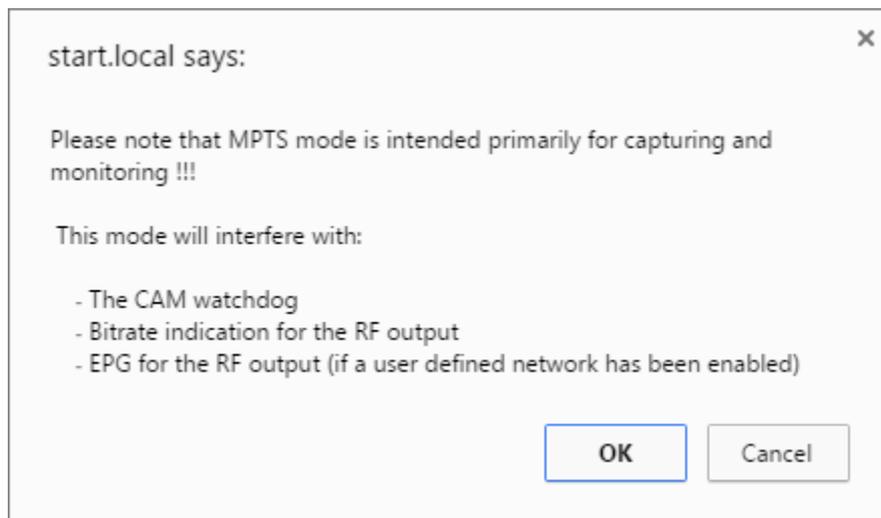

## RF

In the RF Output section, the Universe PRO 3 has to be configured differently than the IP Output. While in the IP section, you add services to your list, in the RF section you have to disable services until you have no longer an overflow. The reason is that for instance a 55Mbps satellite transponder will not fit in a DVB-T MUX of 32 Mbps.

Do not forget to press the "Apply" button after the configuration is done.

**Output Configuration**

Type: DVB-T ▼

Frequency (kHz)	Bandwidth	Constellation	Code Rate	Guard Interval	Mode	Level (dBm)	State
618000	8 MHz ▼	64QAM ▼	7/8 ▼	1/32 ▼	2k ▼	-7	ON ▼

Apply

- Type: Type of output signal (DVB-T or ISDB-T).
- Frequency (kHz): Here you can select the frequency you want to transmit on.
- Bandwidth: Choose the desired bandwidth.
- Constellation: Choose the type of constellation you want to use. (64QAM, 16QAM, QPSK)
- Code Rate: The following code rates can be used 7/8, 5/6, 3/4, 2/3 or 1/2. A higher code rate means more services can be selected without having an overflow.
- Guard Interval: The following code rates can be used 1/32, 1/16, 1/8 or 1/4.
- Mode: 2k, 4k or 8k.
- Level (dBm): Enter a value between -52 and -7 dBm.
- State: Turns the output on or off.

**Bitrate:**  18.794 / 31 Mbps

**Overflow:**

**PID Filter:** 21 PIDs can still be disabled to reduce the output bitrate...

**Bitrate:**  33.738 / 31 Mbps

**Overflow:**

**PID Filter:** 24 PIDs can still be disabled to reduce the output bitrate...

- Bitrate: Total bitrate that is being output at the TV OUT connector. Turns red if you have an overflow.
- Overflow: Turns red if too many services are selected. Please uncheck some services or streams and click apply until the symbol turns grey, and the Bitrate turns green.
- PID Filter: Shows the amount of PIDs you can still filter out. The Universe PRO 3 can disable up to 27 PIDs.

LCN can be enabled (default it is off) in the following screen.

User defined network (LCN) \*\*

<b>Network Name</b>	<b>Version</b>	<b>Network_ID (NID)</b>	<b>Country</b>
8600 - Universe	0	65281	Italy
<b>Original_Network_ID (ONID)</b>	<b>Private_Data_Specifier_ID</b>		
8572	40		

\*\* When disabled, the original network will be used

When "User defined network (LCN)" is disabled, the Universe PRO 3 will use all settings from the original incoming network.

When "User defined network (LCN)" is enabled, the Universe PRO 3 will create a new network on the output, where the LCN is used to logically number your services.

- Network Name : Name of the network on the output.
- Version : Version of your new network on the output (default set to 0).
- Network\_ID (NID) : NID of your new network on the output (default set to 65281).
- Country : Select your country. This will determine the Original\_Network\_ID (ONID) and Private\_Data\_Specifier\_ID automatically. This is required for optimal performance of the LCN and EPG values (TV must be set to the same country).

Do not forget to press the "Apply" button after the configuration is done.

In the next screenshot, you can finalize which channels to put on your RF network.

SID	Type	Name	LCN**	HD LCN**	Enabled	Details
21020		NET5 HD	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	▼
21025		een HD	<input type="text" value="2"/>	<input type="text" value="1"/>	<input checked="" type="checkbox"/>	▼
21029		NPO1 HD	<input type="text" value="4"/>	<input type="text" value="3"/>	<input checked="" type="checkbox"/>	▼
21030		Canvas HD	<input type="text" value="3"/>	<input type="text" value="2"/>	<input checked="" type="checkbox"/>	▼
21035		Veronica/DisneyXD HD	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	▼
21040		NPO3 HD	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	▼
21045		FOX Sports 2 HD int	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	▼
21050		HBO HD	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="checkbox"/>	▼
21012		AT5	<input type="text" value="1"/>	<input type="text" value="4"/>	<input checked="" type="checkbox"/>	▼

- SID: Service ID.
- Type:
  -  : HD-TV
  -  : SD-TV
  -  : Radio
  -  : Data
- Lock:
  -  : Descrambled service
  -  : Problematic service (still scrambled after running through the CAM)
  -  : FTA service that runs through the CAM module
  -  : Scrambled service not running through the CAM module
  - No lock symbol: FTA service
- Name: Name of the service.
- LCN : Defines the logical sequence of your services on the TV. Note : only available when User defined network (LCN) is enabled.
- HD LCN : This will overrule the LCN value in case the TV or STB is able to receive HD channels. Older (non HD) TVs will then be able to fall back on the SD channel using the LCN numbers. Note : only available when User defined network (LCN) is enabled.
- In the above example, HD TVs will follow the sequence of the HD LCN, while SD TVs will follow the sequence of the LCN.
- Enabled: Add the service to the RF output. If you disable a video service only the video stream will be disabled, see remark below.
- Details: Show advanced settings about the service.
- Apply: Save the current service list.

➔ **Remark:** If you disable a SID only the main PID and SID will be disabled. All smaller underlying PIDs (data, audio services) will remain active. The audio will keep running until you rescan your TV. For disabling specific underlying PIDs please go to "Details".


➔ **Remark:** The order of the channels will be determined by your receiver. It is advised to set the country to "Others" when scanning the receiver for channels. You can always use the channel numbering function of your receiver if you want to change the order of the channels.

Click on details to enter the advanced settings for that service. Here you can enable or disable the underlying streams. Do not forget to press the "Apply" button.



- PID: Package identifier.
- Type:  : Video  
 : Audio  
 : Data
- Bitrate: Bitrate of the stream.
- Enabled: Turns the selected stream on or off.

➔ **Remark:** A lot of transponders use shared PIDs. That means that 2 or more services make use of the same stream. In that case, when disabling that shared PID, the Universe PRO 3 will warn you about all the services that will be influenced by disabling that shared stream. Click "OK" to continue or click on "Cancel" if you don't want those services to be affected.

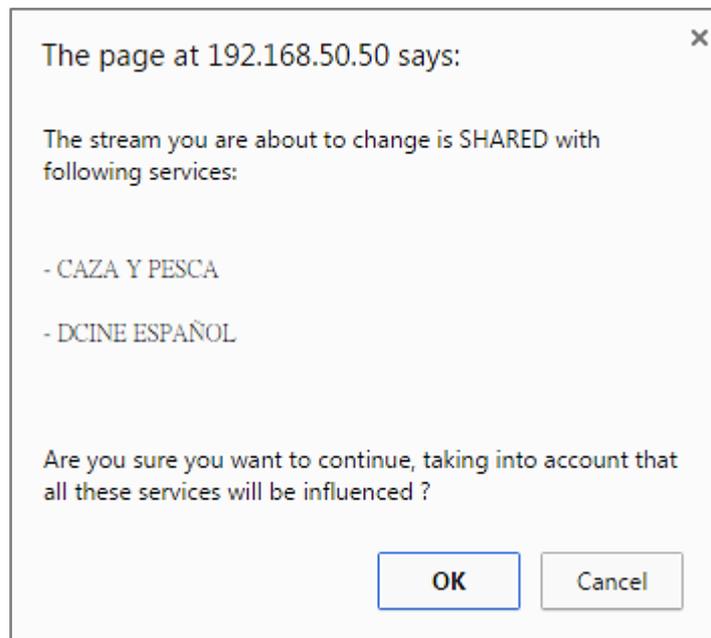



Disabling SIDs vs disabling PIDs.

PID	Type	Bitrate	Enabled
172		0 Mbps	<input type="checkbox"/>
128		0 Mbps	<input type="checkbox"/>
129		0 Mbps	<input type="checkbox"/>


If you disable all PIDs but let the covering SID enabled your receiver will still find the service but there will be no image or sound. This can be used if you temporary want to disable a service but do not want to rescan your receiver.

If you enable all PIDs and disable the covering SID, the PIDs will remain active and consume bandwidth but your receiver won't find it when you do a rescan. So if you want to save bandwidth you better disable the underlying PIDs starting with the one that has the biggest bitrate as the amount of PIDs that can be filtered is limited.

### 3.3 Import and export settings

  

 : Click on this button to import your settings from the same or another Universe PRO 3.



: Click on this button to export your setting to a configuration file. You can import this configuration file in another Universe PRO 3 or to store your configuration on your pc.

## 4. TECHNICAL SPECIFICATIONS

5600 – Universe Pro 3		
<b>INPUT</b>		
Number of inputs	-	3
Tuners	-	3
Frequency Range	MHz	42 – 2150
Input level	dBm	-65 to -20
Standard	-	DVB-S/S2   DVB-T/T2   DVB-C
DC remote power for LNB or LNA	V - mA	0/13/18/22kHz DiSEqC, EN50494, EN50607 350
<b>RF OUTPUT</b>		
Number of outputs	-	1 RF with passive loop-through (-8 dB)
Multiplexes	-	3 (non adjacent possible)
Frequency range	MHz	174 - 862
Output level	dBm	-55 to -10 (adjustable)
Standard	-	DVB-T   ISDB-T
Modulation error rate (MER)	dB	40
<b>ETHERNET OUTPUT</b>		
Number of outputs	-	3Gb Ethernet
Standard	-	IEEE 802.3ab 10/100/1000 Base-T
Protocol	-	Multicast IP/UDP
Transport stream	-	SPTS / MPTS *
<b>GENERAL</b>		
CI slots	-	3
Input voltage	VDC	100-240, 50/60 Hz
Power consumption	W	30 (without CAM and without remote power)
Operating temperature	°C	0 - 50
Dimensions	-	19 inch x 1 RU x 240 mm
Weight	kg	3.4
Accessories	-	Mains cable, 3 Ethernet cables

\* Full MPTS from DVB input transponder

## 5. CONDITIONS OF WARRANTY

Unitron N.V. warrants the product as being free from defects in material and workmanship for a period of 24 months starting from the date of production indicated on it. See note below.

If during this period of warranty the product proves defective, under normal use, due to defective materials or workmanship, Unitron N.V, at its sole option, will repair or replace the product. Return the product to your local dealer for reparation.

### **THE WARRANTY IS APPLIED ONLY FOR DEFECTS IN MATERIAL AND WORKMANSHIP AND DOES NOT COVER DAMAGE RESULTING FROM:**

- Misuse or use of the product out of its specifications,
- Installation or use in a manner inconsistent with the technical or safety standards in force in the country where the product is used,
- Use of non-suitable accessories (power supply, adapters...),
- Installation in a defect system,
- External cause beyond the control of Unitron N.V. such as drop, accidents, lightning, water, fire, improper ventilation...

### **THE WARRANTY IS NOT APPLIED IF**

- Production date or serial number on the product is illegible, altered, deleted or removed.
- The product has been opened or repaired by a non-authorized person.

### **NOTE**

Date of production is YYWW format, example 1527 = year 2015 – week 27.  
For the serial number barcodes, the date corresponds to the 4 first numbers

## 6. APPENDIX

### 6.1 VHF Frequency table

TV Band	Channel	Center Frequency (KHz)	Frequency (KHz)
I	2	50500	47000 - 54000
	3	57500	54000 - 61000
	4	64500	61000 - 68000
III	5	177500	174000 - 181000
	6	184500	181000 - 188000
	7	191500	188000 - 195000
	8	198500	195000 - 202000
	9	205500	202000 - 209000
	10	212500	209000 - 216000
	11	219500	216000 - 223000
	12	562000	223000 - 230000

## 6.2 UHF Frequency table

TV Band	Channel	Center Frequency (KHz)	Frequency (KHz)	
IV	21	474000	470000 – 478000	
	22	482000	478000 – 486000	
	23	490000	486000 – 494000	
	24	498000	494000 – 502000	
	25	506000	502000 – 510000	
	26	514000	510000 – 518000	
	27	522000	518000 – 526000	
	28	530000	526000 – 534000	
	29	538000	534000 – 542000	
	30	546000	542000 – 550000	
	31	554000	550000 – 558000	
	32	562000	558000 – 566000	
	33	570000	566000 – 574000	
	34	578000	574000 – 582000	
	35	586000	582000 – 590000	
	36	594000	590000 – 598000	
	37	602000	598000 – 606000	
	38	510000	606000 – 614000	
	V	39	618000	614000 – 622000
		40	626000	622000 – 630000
		41	634000	630000 – 638000
		42	642000	638000 – 646000
		43	650000	646000 – 654000
		44	658000	654000 – 662000
		45	666000	662000 – 670000
		46	674000	670000 – 678000
		47	682000	678000 – 686000
		48	690000	686000 – 694000
		49	698000	694000 – 702000
		50	706000	702000 – 710000
		51	714000	710000 – 718000
		52	722000	718000 – 726000
		53	730000	726000 – 734000
		54	738000	734000 – 742000
		55	746000	742000 – 750000
		56	754000	750000 – 758000
		57	762000	758000 – 766000
		58	770000	766000 – 774000
59		778000	774000 – 782000	
60		786000	782000 – 790000	

## 6.3 Power Conversion Table

$\mu\text{V } 75\Omega$	$\text{dB}\mu\text{V}$	$\text{dBm}$	$\text{mV } 75\Omega$	$\text{dB}\mu\text{V}$	$\text{dBm}$	$\mu\text{V } 75\Omega$	$\text{dB}\mu\text{V}$	$\text{dBm}$
1	0	-109	1	60	-49	1	120	+11
1.5	3.5	-105.5	1.5	63.5	-45.5	1.5	123.5	+14.5
2	6	-103	2	66	-43	2	126	+17
2.5	8.0	-101	2.5	68	-41	2.5	128	+19
3	9.5	-99.5	3	69.5	-39.5	3	129.5	+20.5
3.5	11	-98	3.5	71	-38	3.5	131	+22
4	12	-97	4	72	-37	4	132	+23
4.5	13	-96	4.5	73	-36	4.5	133	+24
5	14	-95	5	74	-35	5	134	+25
6	15.5	-93.5	6	75.5	-33.5	6	135.5	+26.5
7	17	-92	7	77	-32	7	137	+28
8	18	-91	8	78	-31	8	138	+29
9	19	-90	9	79	-30	9	139	+30
10	20	-89	10	80	-29	10	140	+31
15	23.5	-85.5	15	83.5	-25.5			
20	26	-83	20	86	-23			
25	28	-81	25	88	-21			
30	29.5	-79.5	30	89.5	-19.5			
35	31	-78	35	91	-18			
40	32	-77	40	92	-17			
45	33	-76	45	93	-16			
50	34	-75	50	94	-15			
60	35.5	-73.5	60	95.5	-13.5			
70	37	-72	70	97	-12			
80	38	-71	80	98	-11			
90	39	-70	90	99	-10			
100	40	-69	100	100	-9			
150	43.5	-66.5	150	103.5	-5.5			
200	46	-63	200	106	-3			
250	48	-61	250	108	-1			
300	49.5	-59.5	300	109.5	+0.5			
350	51	-58	350	111	+2			
400	52	-57	400	112	+3			
450	53	-56	450	113	+4			
500	54	-55	500	114	+5			
600	55.5	-53.5	600	115.5	+6.5			
700	57	-52	700	117	+8			
800	58	-51	800	118	+9			
900	59	-50	900	119	+10			
			1000	120	+11			







[www.unitrongroup.com](http://www.unitrongroup.com)

**UNITRON NV**  
**Frankrijklaan 27**  
**B-8970 Poperinge**  
**Belgium**

**T +32 57 33 33 63**  
**F +32 57 33 45 24**

[sales@unitrongroup.com](mailto:sales@unitrongroup.com)

[www.unitrongroup.com](http://www.unitrongroup.com)