



1. In the Main Menu, you should go to the “**SETTINGS**” icon/shortcut:

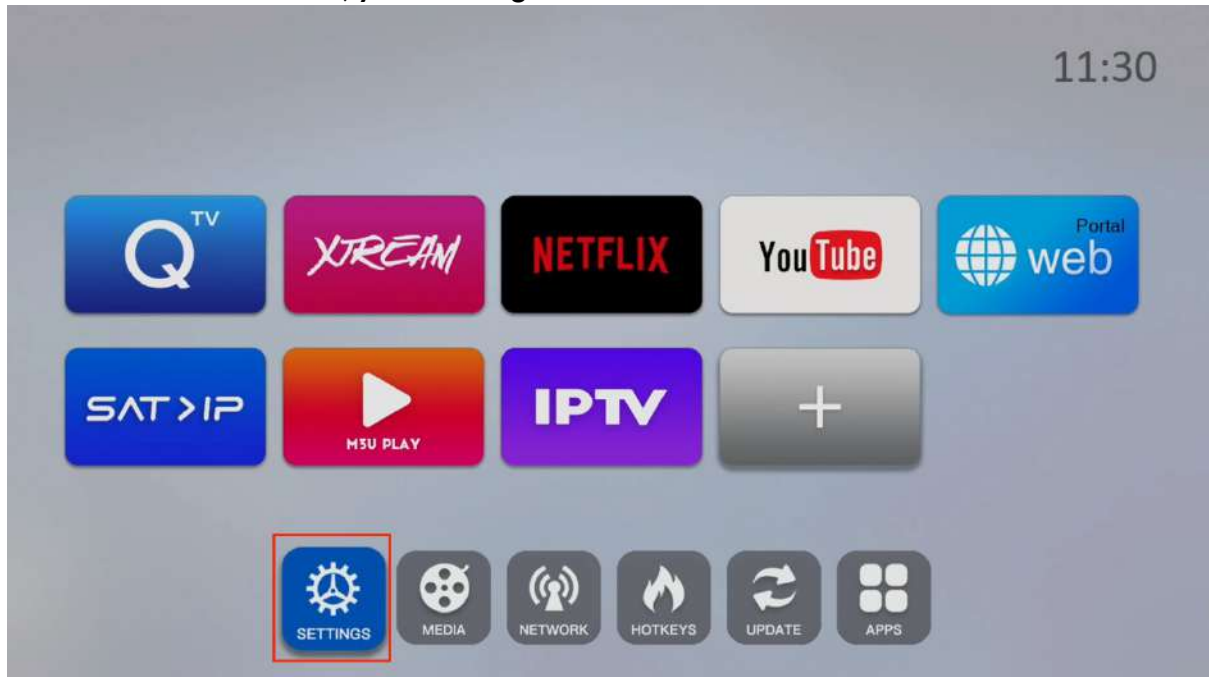


2. You should go to the “**Parental Control**” menu:

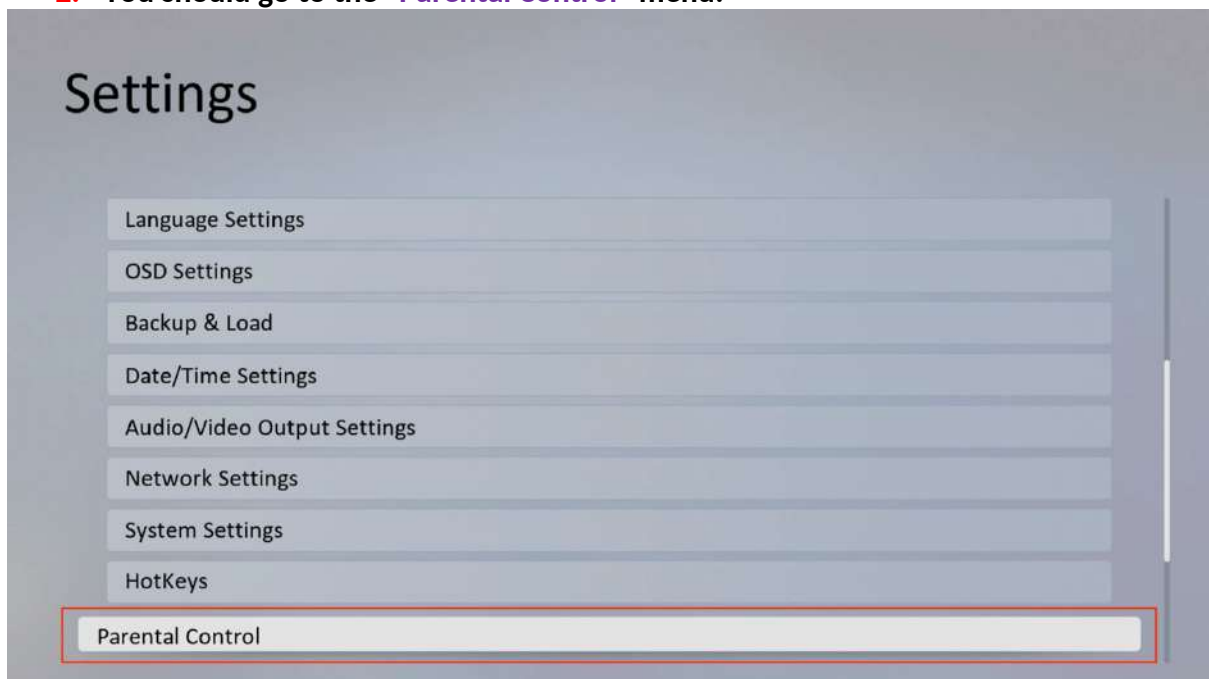

3. It will ask you to input the password, the password is “0000” by default.




4. It will go to the “Parental Control” menu, where you will see the “Settings Menu” function set in “Unlock” by default:

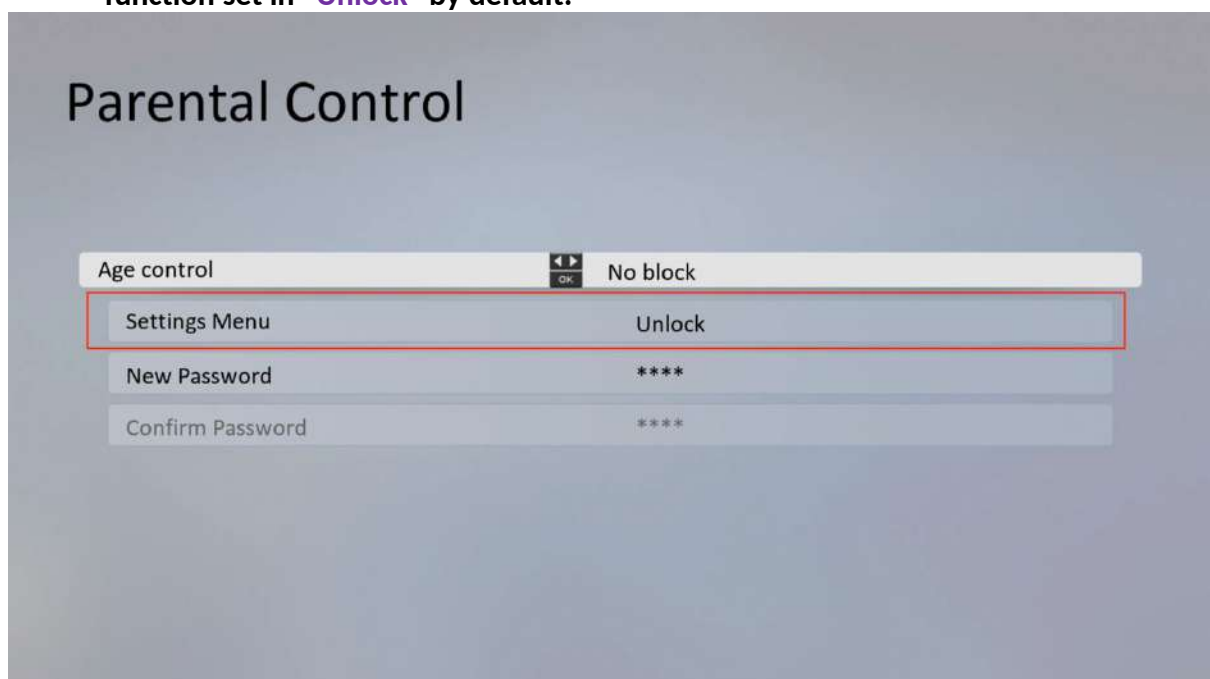

5. Then in the “Settings Menu” function, you should set to “Lock” option:



6. Once the “Lock” option is activated, then the shortcuts/menus in the Main Menu will be locked and every time you try to access it will ask you for the Password “0000” by default:

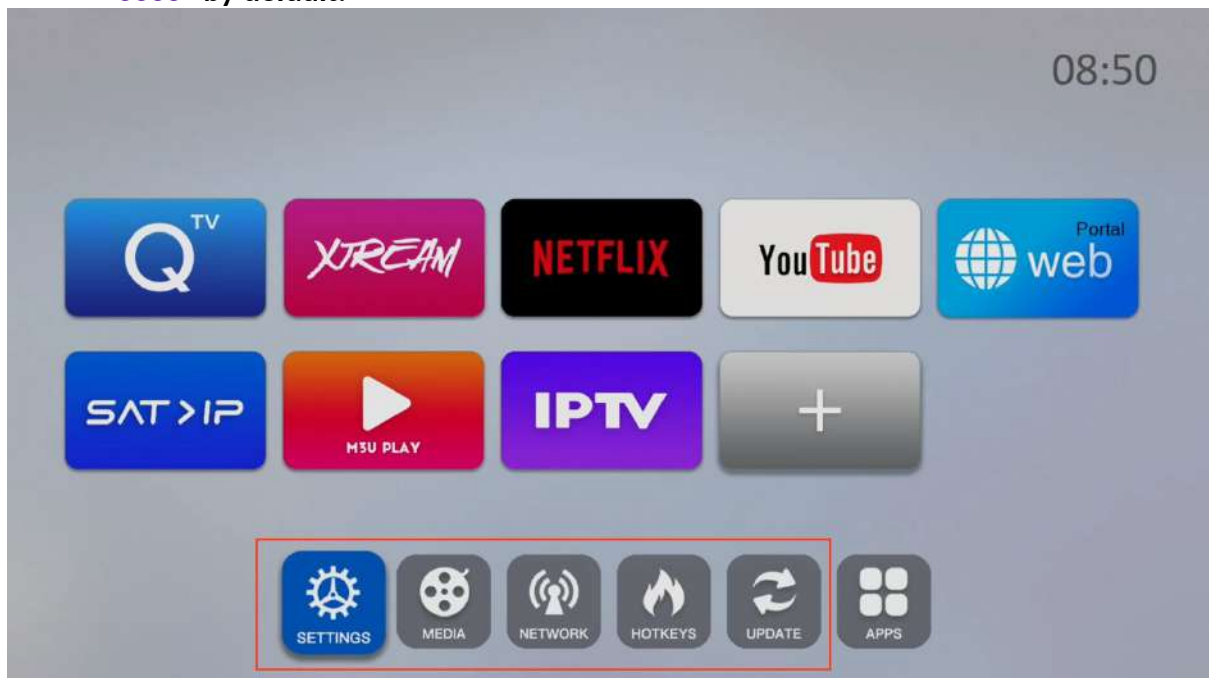

08:50



Please Input Password

