
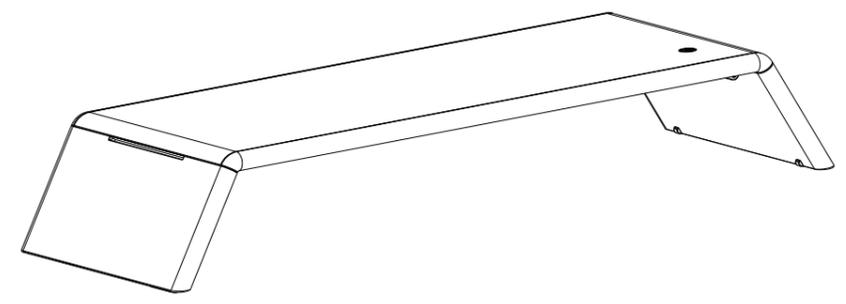


Item No. : SPP-102
Desktop Workstation



No.	Workstation
A	 x1
No.	Power cable
B	 x1


17"~30"
Screen size



L ≤ 520mm
H ≤ 50mm
Applicable keyboard size


max
10kg
Bearing range





Table cover size:

Attention! Please make sure the base is safely placed on the desktop.

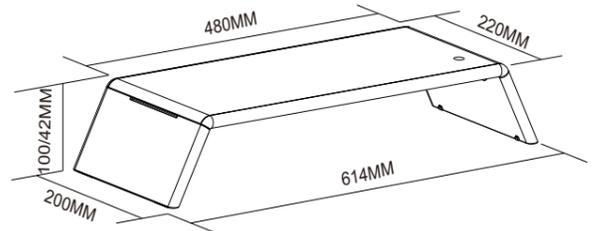

STEP 1

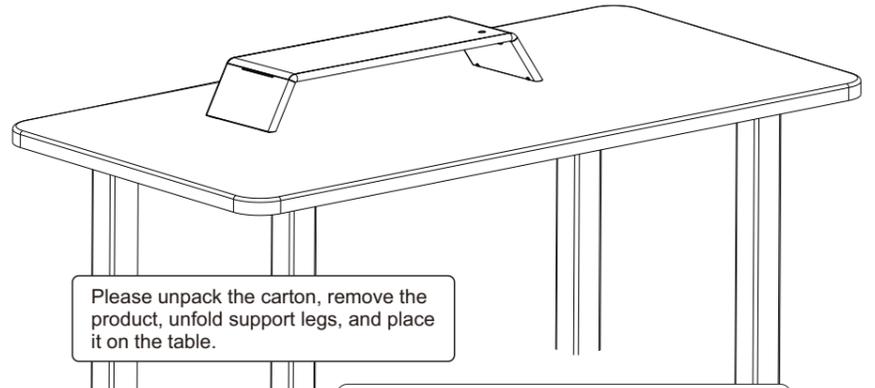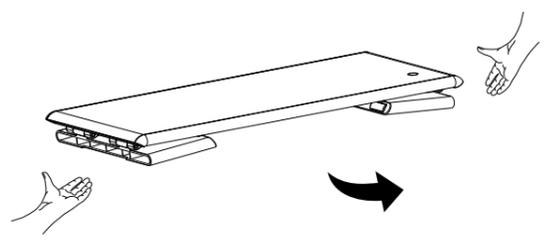


Please unpack the carton, remove the product, unfold support legs, and place it on the table.


 Make sure that the size of the table is in accordance with the placement requirements to avoid property damage and/or personal injury.
Attention

STEP 2


Put the monitor on the workstation

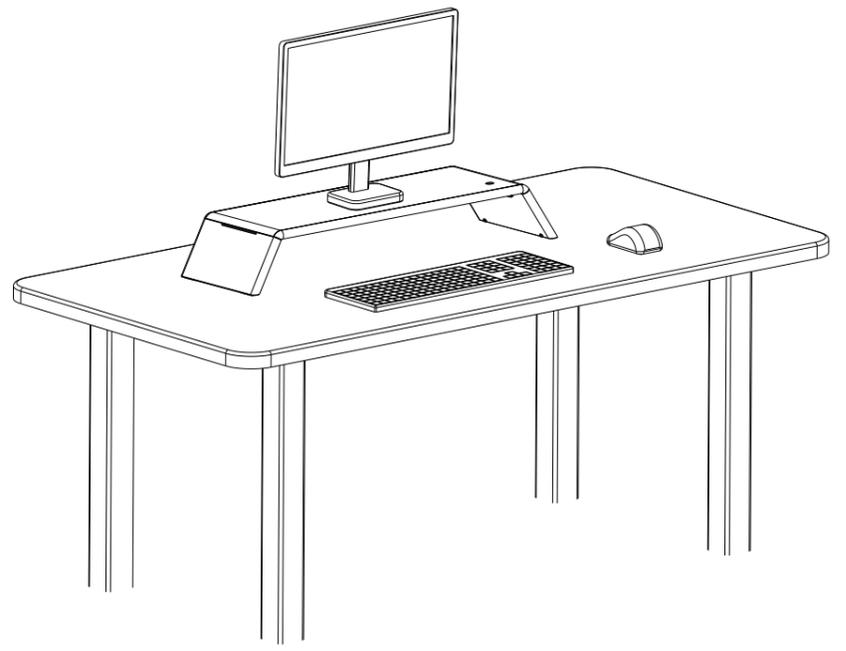

Function Description

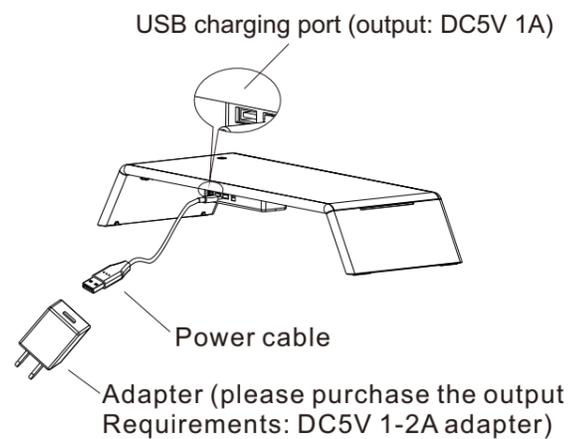

Push the keyboard and mouse under the booster and turn on the UV disinfection light switch to disinfect the keyboard and mouse.

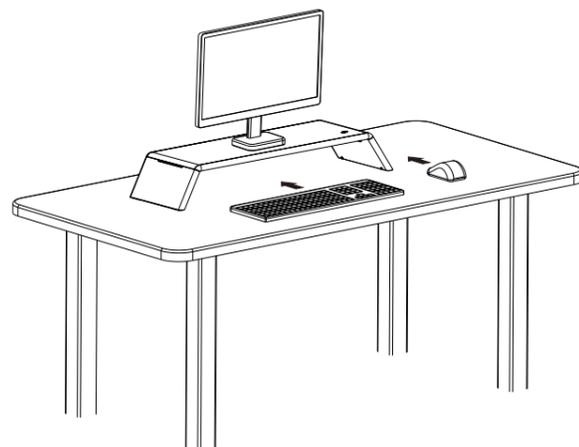


UV sterilization lamp function description

1. After pressing the UV light switch 15S, the UV disinfection light is turned on.
2. The UV sterilization lamp will automatically turn off after 10 minutes.
3. When the product is turned up or tilted, the UV disinfection lamp is automatically turned off; When the product is placed horizontally, the UV sterilization lamp can be used normally.

UV disinfection lamp precautions

1. When the UV disinfection lamp is turned on, please keep the distance of 0.5M or more with the product. Otherwise, it may cause damage to your eyes or skin.
2. Do not turn on the UV light on a transparent or reflective desktop.
3. Do not flip and move the product while the UV lamp is on.
4. Children are prohibited from accessing and using UV sterilization lamps.

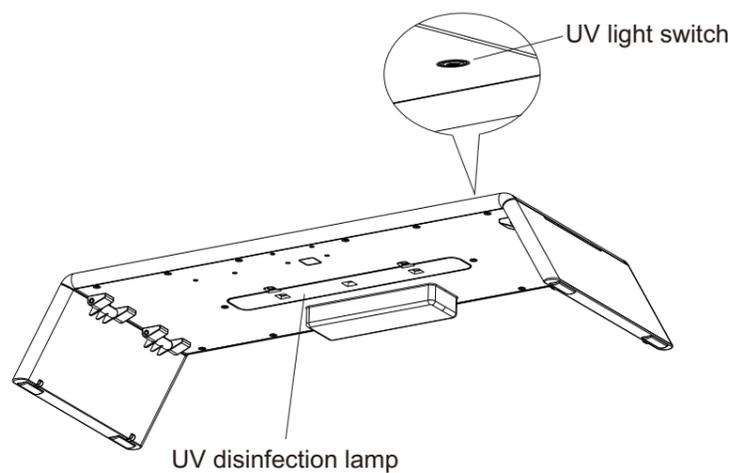

Made in ChRL for
DMTrade Mikołaj Tomaszewski
Wiśniowa 36, 64-000 Kościan, Poland

Directives EMC (2014/30/UE), LVD (2014/35/UE), RoHS (2011/65/UE + 2015/863/UE).

NIP: PL6981681757
email: sklep@dmtrade.pl
phone #1: +48 661 082 052
phone #2: +48 726 082 052

www.ergoline.spacetrnik.eu